



YOUR UBITY INC. SERVICE

- YOUR EQUIPMENT -

CONFIGURE AN ATA SPA122/SPA112

In order to configure an ATA SPA122/SPA112 with the Ubity solution you must follow the instructions below :

- 1 - Go on the ATA webpage using the the instructions provided by the manufacturer's user guide.
- 2 - Go to the *Voice* tab, then to the *Provisioning* tab and enter the value below in the *Profile Rule* field : [http://p.ubity.com/ng/cisco/\\$MA](http://p.ubity.com/ng/cisco/$MA)

Need help ?

If you have questions or you need to contact our support please send us an e-mail to support@ubity.com or dial 514-907-3400, extension 2.